




6 將硬碟固定在機殼的安裝位置，標籤面朝上，接頭朝向機殼內側。

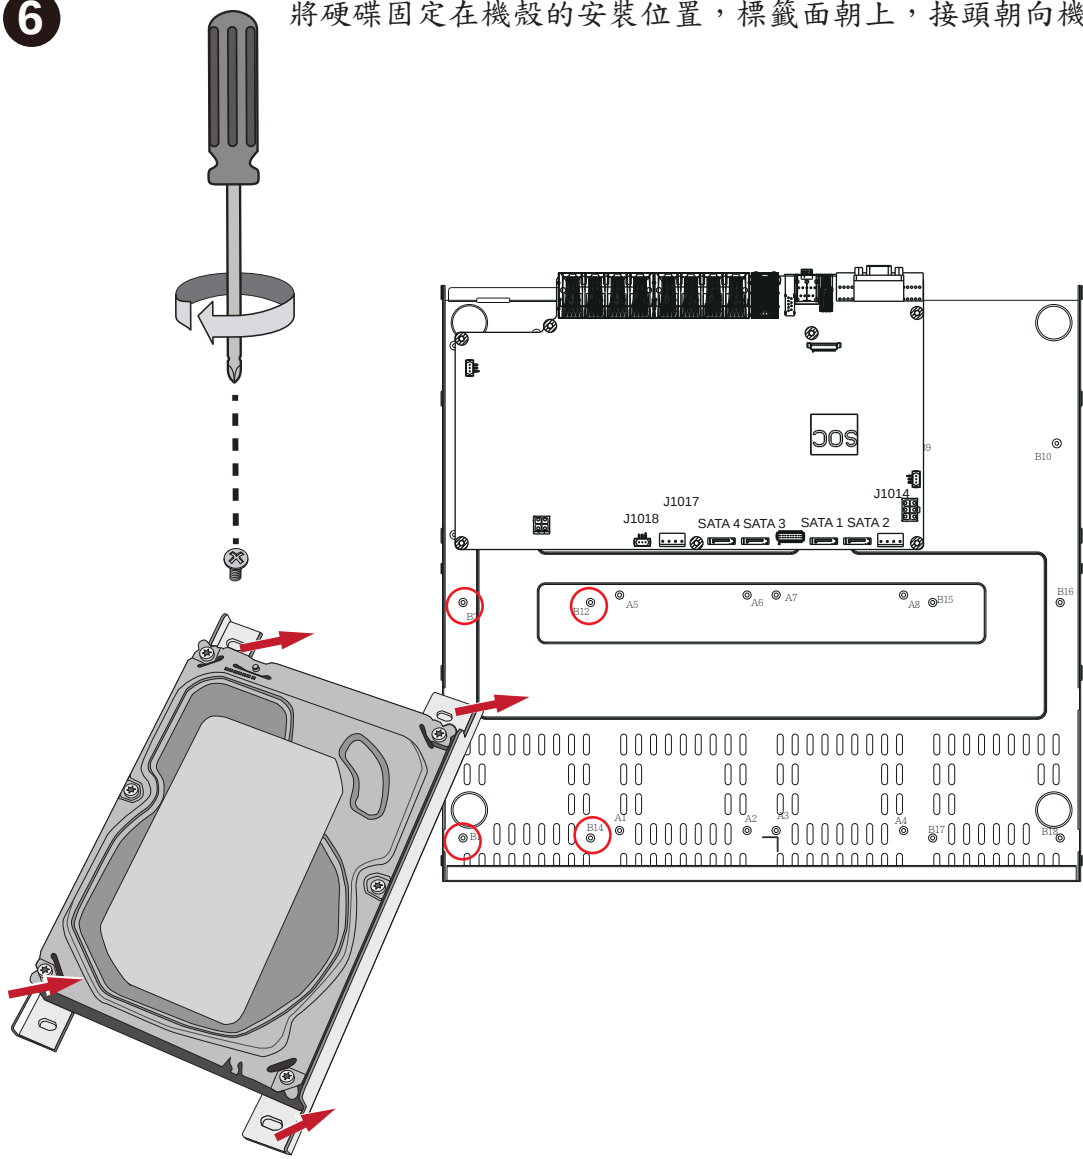


7 以下是硬碟的相關位置。

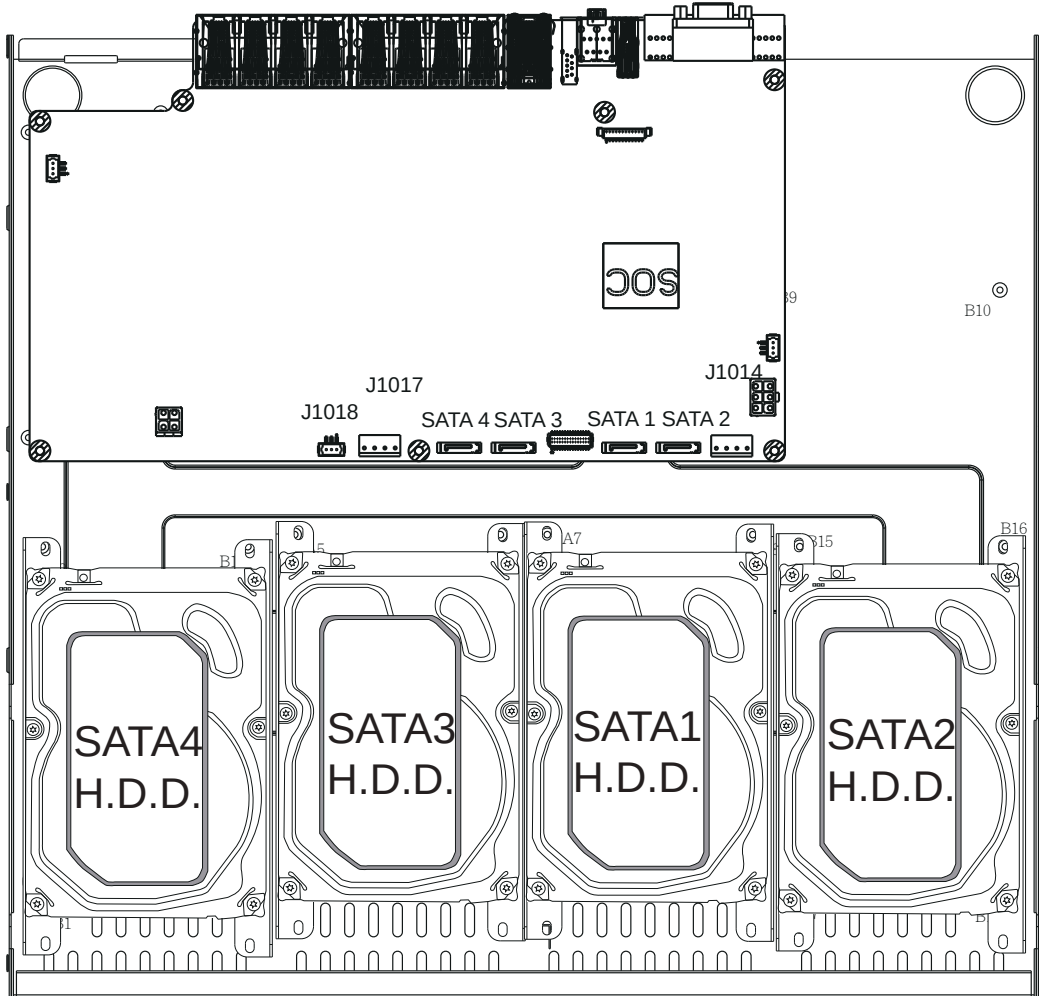

8 安裝上蓋。

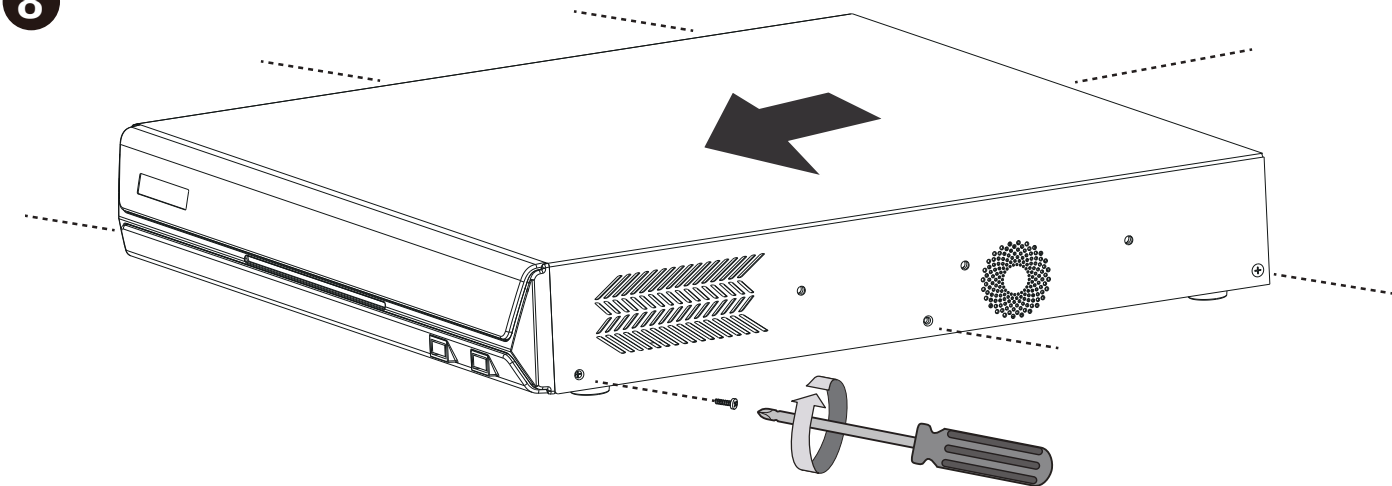


9 連接滑鼠或鍵盤。

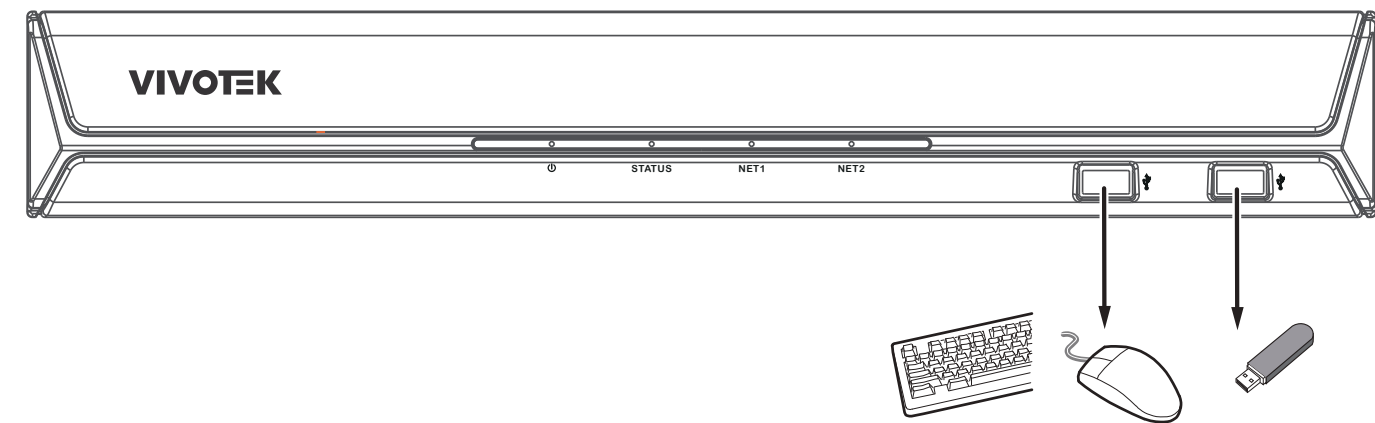


1. 使用 HDMI 纜線連接顯示器。
2. 使用 CAT5e 線或品質較佳的乙太網路線連接至網路。
3. 連接 USB 裝置，例如滑鼠、鍵盤或 USB 隨身碟（格式化為 FAT 格式）或 UPS 不斷電系統。
4. 將電源供應器連接至主電源及系統。

10

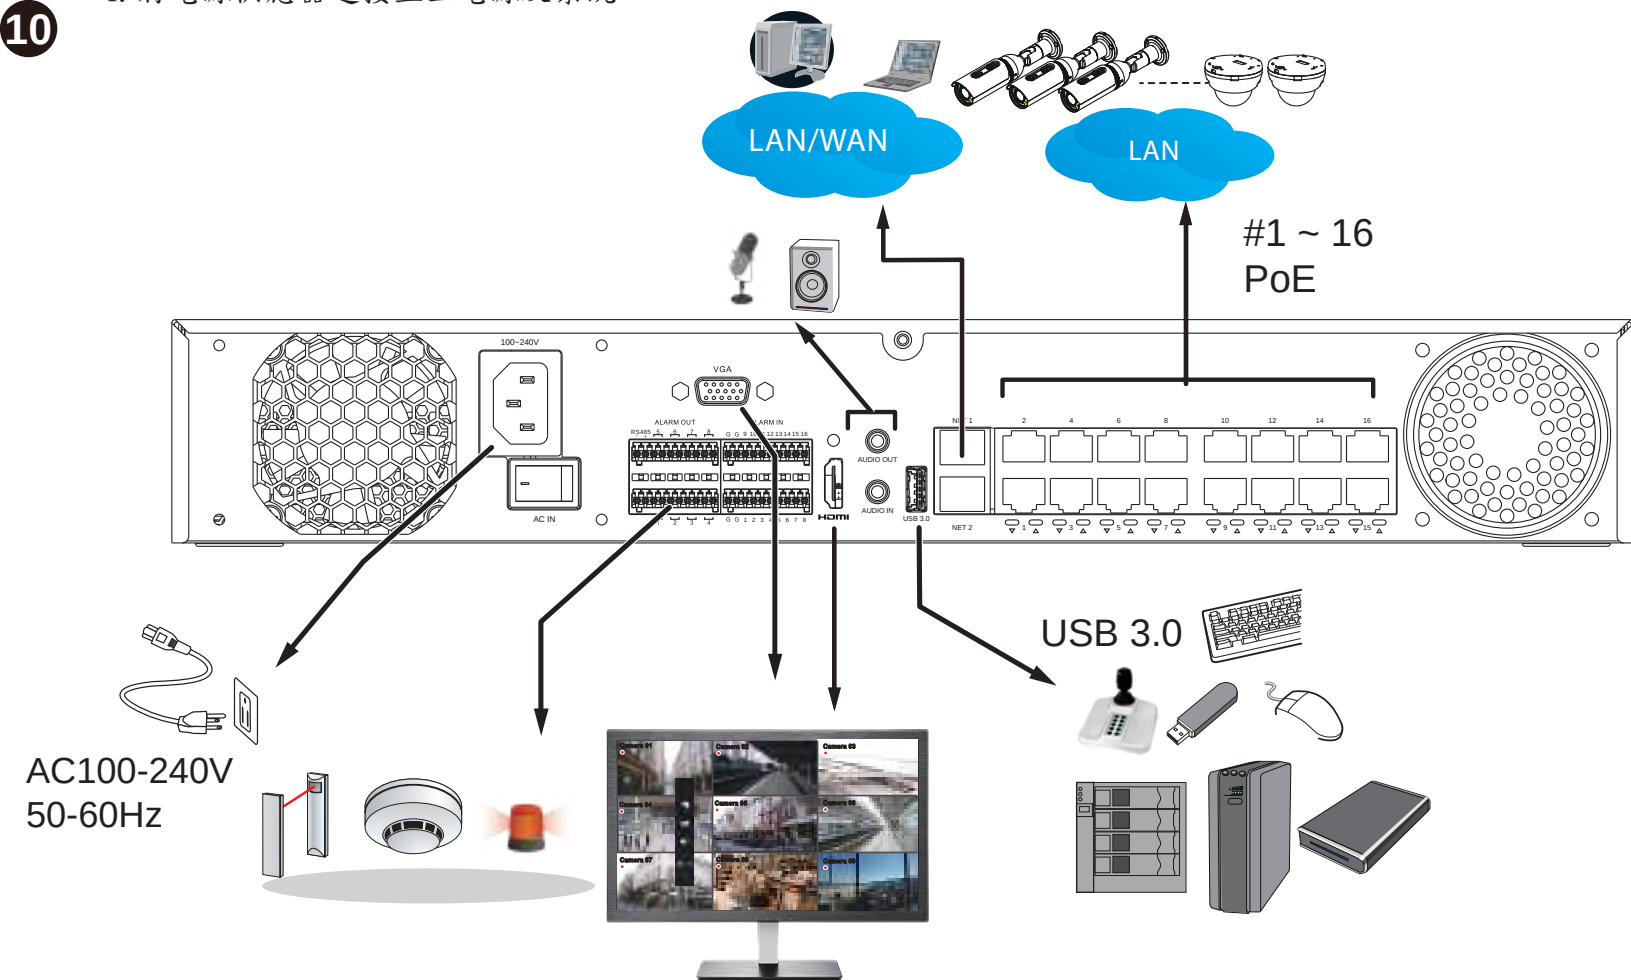

系統會自動選取網路上偵測到的攝影機。如有需要，可取消選取您不想包含在設定中的攝影機。按一下「繼續」按鈕以繼續。

11 系統將自動在已安裝的磁碟機上建立磁區，此程序可能需要數分鐘的時間。

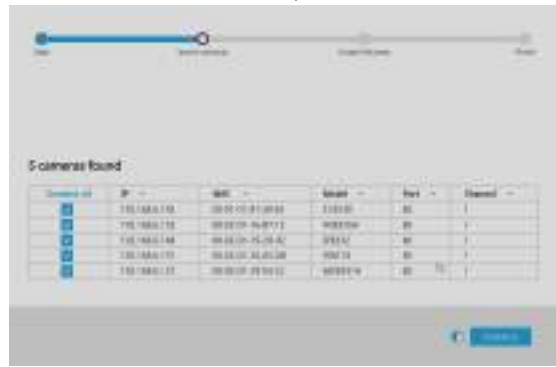

設備名稱：網路影像錄影機，型號（型式）：ND9542P/ND9442P Equipment name ¹⁾ Type designation (Type) ²⁾						
單元 Unit ³⁾	限用物質及其化學符號 ⁴⁾ Restricted substances and its chemical symbols ⁴⁾					
	鉛Lead ⁴⁾ (Pb) ⁵⁾	汞Mercury ⁴⁾ (Hg) ⁵⁾	鎘Cadmium ⁴⁾ (Cd) ⁵⁾	六價鉻 Hexavalent chromium ⁴⁾ (Cr ⁶⁺) ⁵⁾	多溴聯苯 Polybrominated biphenyls ⁴⁾ (PBB) ⁵⁾	多溴二苯醚 Polybrominated diphenyl ethers (PBDE) ⁵⁾
外殼組件 ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾
電路板組件 ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾
電源供應器 組件 ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾
線材組件 ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾	○ ⁶⁾
備考1. “>0.1 wt %”及“>0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 ⁴⁾ Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. ⁴⁾						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。 ⁶⁾ Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. ⁶⁾						
備考3. “-”係指該項限用物質為排除項目。 ⁴⁾ Note 3: The “-” indicates that the restricted substance corresponds to the exemption. ⁴⁾						

Please contact authorized distributors for warranty and RMA service.
Visit <https://www.vivotek.com/support/warranty-rma>

 Please do not connect the NVR's PoE ports to non-PD* devices (such as an Ethernet switch LAN port). The Ethernet control circuits may not be compatible.
* PD = A Powered Device designed to receive power source from a PoE connection such as network cameras.

All specifications are subject to change without notice.
Copyright © 2022 VIVOTEK INC. All rights reserved.

VIVOTEK INC.
6F, No.192, Lien-Cheng Rd., Chung-Ho, New Taipei City, 235, Taiwan, R.O.C.
[T: +886-2-82455282] [F: +886-2-82455532] [E: sales@vivotek.com]

VIVOTEK Europe
Zandsteen 15, 2132 MZ Hoofddorp Delta Electronics
T: +31 (0)20 800 3817 E: sales@vivotek.com

VIVOTEK USA, INC.
2050 Ringwood Avenue, San Jose, CA 95131
[T: 408-773-8686] [F: 408-773-8298] [E: salesusa@vivotek.com]